

# AUdit AUDIT SOLUTION

DATA FROM DOOR CLOSING EFFORTS INSPECTION WITH  
EZSPEED, EZENERGY AND EZPRESSURE DEVICES



# AUdit AUDIT SOLUTION



## ★ TECHNOLOGY

- Software design for easy data collection in Audit environment
- Connects to EZSpeed, EZEnergy and EZPressure individually or combined
- Model/VIN based database
- Door location identification
- Report numerical or graphical data

## + FEATURES

- Manage tolerances, units, device settings from within software
- Optional bar code connection for VIN input
- Manual or Automatic gauge control

## ✓ SOFTWARE OPTIONS

- Perfect tool for documenting showing evolution of closing efforts based on component, situation and age



## ➤ EZSPEED FEATURES

- Records all minimum closing speeds
- Shows speed trend line
- Documents all closed and not closed samples




## ⊖ EZENERGY FEATURES

- Records all force, speed and energy values
- Downloads curve data to view force and speed in function of door angle
- Performs manual recordings for Automatic doors



## ▲ EZPRESSURE FEATURES

- Records pressure peak, vacuum and time values
- Downloads curve data to view pressure in function of time
- Performs manual recordings

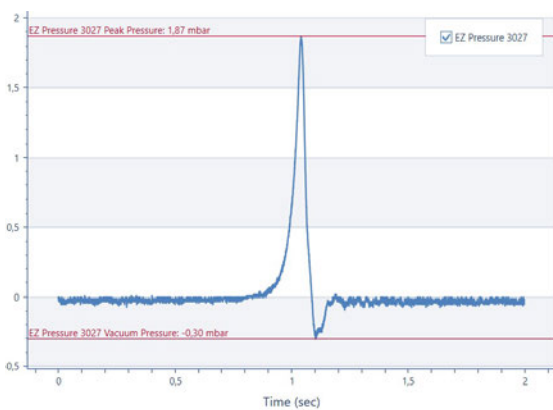

## 🔧 SPECIFICATIONS

<b>Operating System</b>	Windows 8/10 64bit
<b>Model Compatibility</b>	EZSpeed, EZPressure and EZEnergy
<b>Requirement</b>	Bluetooth or Wifi enabled devices
<b>Graphing</b>	Speed/Time or Speed/Angle, Force/Time or Force/Angle, Signal Filter Options
<b>Synchronizing</b>	Synchronizes all connected devices
<b>Database</b>	Manage Vehicle Model, Door Location, Measurements, Curve Data
<b>Export</b>	Graphical (png) or Numerical (csv)
<b>Control</b>	Manual or Automatic Measurements